



märklin
H0

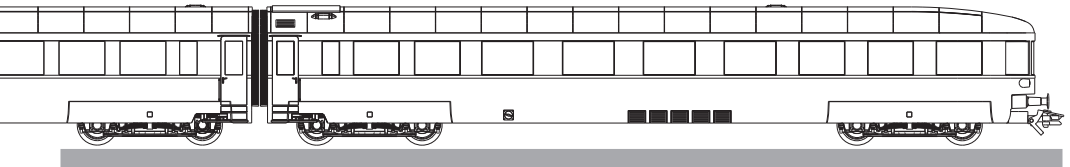



Wagen-Set „Blauer Enzian“
42610

**Zugverband kuppeln • Coupling the Train Together • Couplage du train • Trein aankoppelen •
Uppkoppling av ett tåg •**




WRPw4üe 10401



A4üe 10402

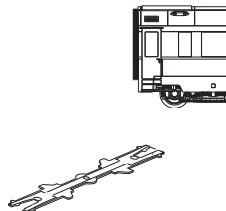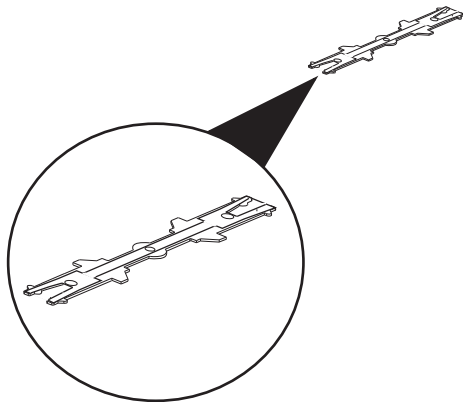

**Enganche del convoy • Agganciamento della composizione del treno •
Sammenkobling af togstammen**




A4üe 10403




A4üe 10404




A4üe 10405





Einsetzen der stromführenden Kupplungen
Installing current-conducting couplers
Mise en place des accouplements conducteurs
Inzetten van de spanninggeleidende koppelingen
Introducir los enganches conductores de corriente
Inserimento dei ganci conduttori di corrente
De strömledande kopplen monteras
Indsætning af de strømførende koblinger

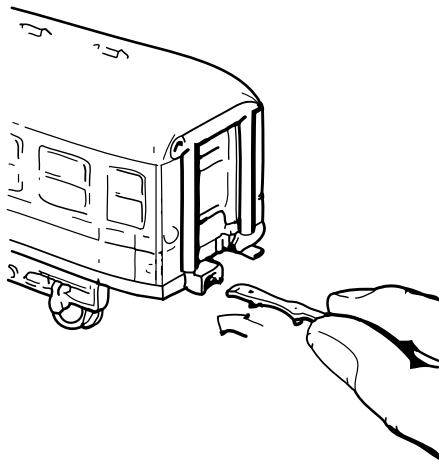

Zug kuppeln
Coupling the train
Accoupler le train
Trein koppelen
Operación de enganche del tren
Accoppiamento dei treni
Tåget kopplas
Kobling af togstamme

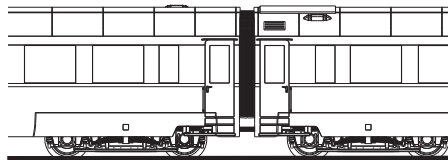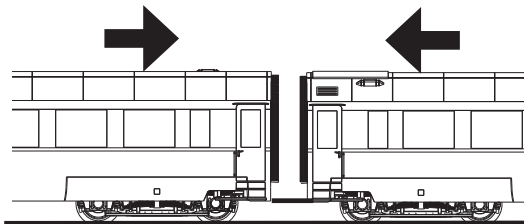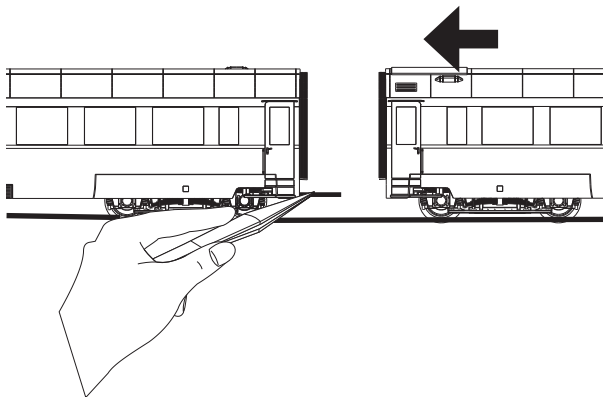

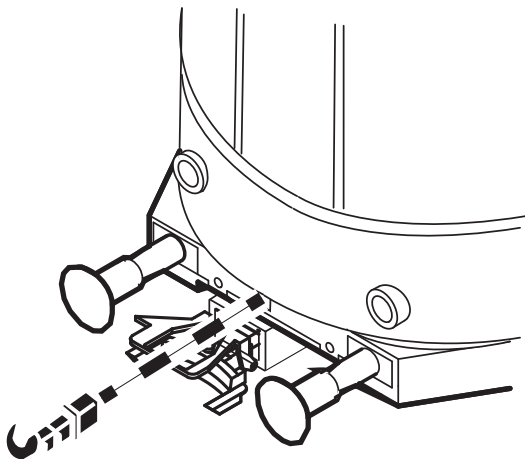

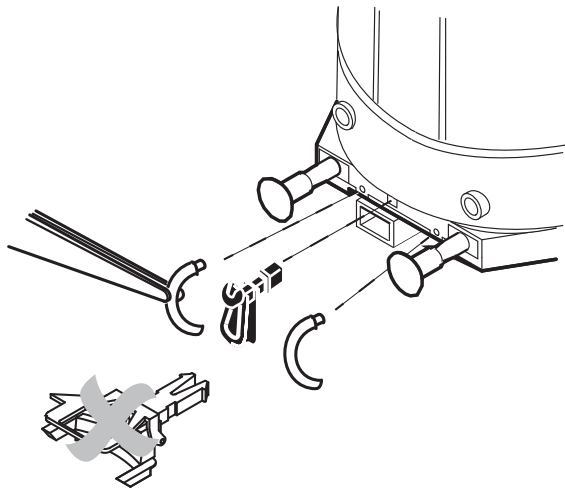

Gebr. Märklin & Cie. GmbH
Stuttgarter Straße 55 - 57
73033 Göppingen
Deutschland
www.maerklin.com

152456/1110//Ha1Ef
Änderungen vorbehalten
© by Gebr. Märklin & Cie. GmbH